Panasonic

Installation Guide
Wall Mount Cover

Model No. BL-CA51A

A compatible gang box (customer-provided) is needed to use this product.
See the Panasonic Network Camera support website at
http://panasonic.co.jp/pcc/products/en/netwkcam/technic/gangbox_info.html
for a list of recommended gang boxes.

How to Use This Manual
This manual describes safety instructions, included items, specifications, and how to install this product.
The illustrations used in this document are of BL-C111A.

Abbreviation
- "Network Camera" is called "Camera" in this manual.

Consult an authorized dealer for installation.

Supported Product (customer-provided)
This product is the dedicated wall mount cover for the cameras and gang boxes listed below. For the latest information, visit the Panasonic Network Camera support website at **http://panasonic.co.jp/pcc/products/en/netwkcam/**

Compatible Cameras (as of March 2007)
Model No.: BL-C111A, BL-C131A
Note
- When using this product with a wireless camera (such as the BL-C131A), communication range and frame rate may be reduced.

Compatible Gang Boxes
Vertically-mounted triple gang box. See the Panasonic Network Camera support website at
http://panasonic.co.jp/pcc/products/en/netwkcam/technic/gangbox_info.html
for a list of recommended gang boxes.

Additional network camera models and gang boxes may become available for use with this product.

Included Items
The following items are provided.

Wall Mount Cover . .1 pc. Order No.: PQKV10073Z1 	**Mounting Bracket** . . 1 pc. Order No.: PQZMCA51A 	**Screw A**. . . . . .4 pcs. Order No.: XTB4+20AFJ 	**Screw B** . . . . . 2 pcs. Order No.: XSN3+22FN
Installation Guide (This manual) . . . . . 1 pc.			

© 2007 Panasonic Communications Co., Ltd. All Rights Reserved.

PQQX16261ZA KK0307CM0

CA51A

Installing this product

When using a wireless camera (such as the BL-C131A)

- A LAN cable does not need to be connected to the camera.
- Refer to the Installation Guide and Setup Guide included with the camera and confirm that the camera can be accessed wirelessly before following the instructions below.

1. Run the LAN cable and AC adaptor cord through the gang box.

- Use only the AC adaptor included with the camera.
- The cables should extend about 30 cm (1 foot) from the gang box.

2. Connect the LAN cable and AC adaptor cord to the camera.

- Refer to the Installation Guide included with the camera for details.

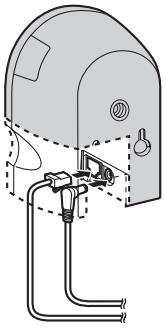

3. Secure the included mounting bracket to the camera as shown.

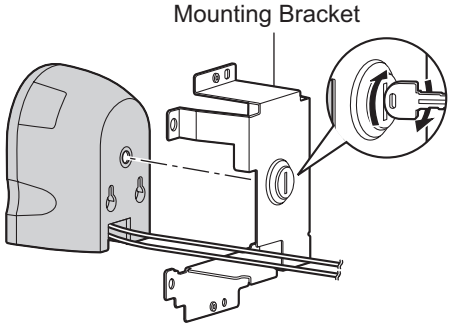

4. Secure the mounting bracket to the gang box (customer-provided) using screws A (included).

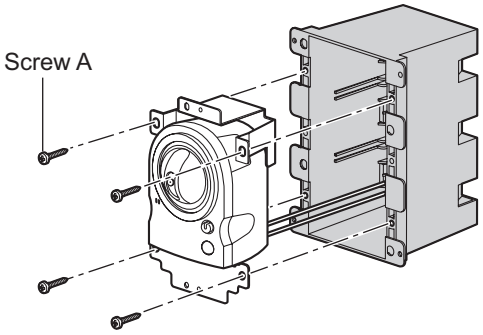

5. Secure the included wall mount cover to the mounting bracket using screws B (included).

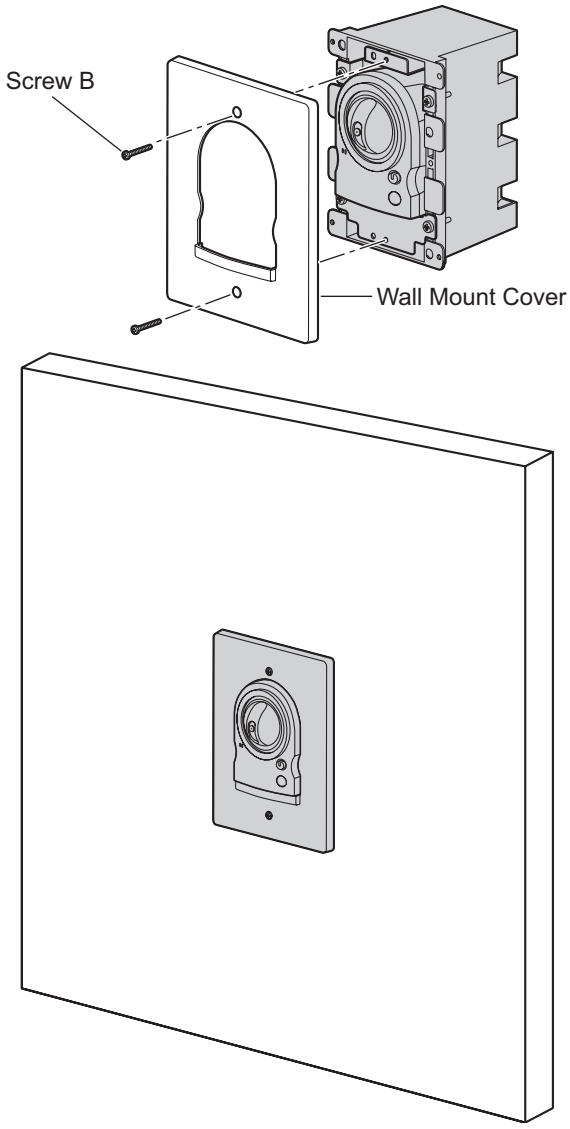

Specifications*

Dimension (WHD)	About 136 mm (5 3/8 inches) × 177 mm (6 15/16 inches) × 59 mm (2 5/16 inches)
Weight	About 190 g (0.42 lb.)

* Specifications listed apply to the assembled wall mount cover and mounting bracket.